
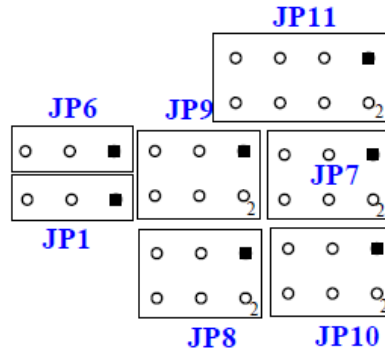



Navodilo za priklop prikazovalnika (PD-2501/5601) na Jiva in KS touch terminale

KS6615/6617:


KS terminal snamemo s podnožja in na spodnji strani odpremo kovinski pokrov. Pod njim najdemo jumperje:

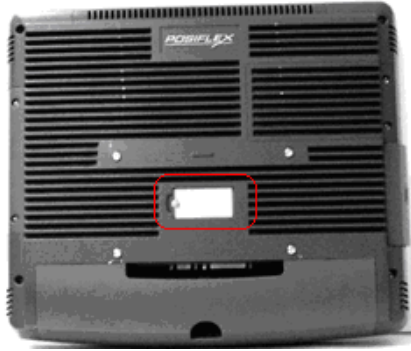

 
Za napajanje prikazovalnika na COM1 prestavimo jumper JP7 na pin 1-3



 
Za napajanje prikazovalnika na COM2 prestavimo jumper JP7 na pin 2-4



 Za napajanje prikazovalnika na COM3 prestavimo jumper JP9 na pin 1-3




 Za napajanje prikazovalnika na COM3 prestavimo jumper JP9 na pin 2-4




KS6215/6217:


KS terminal snamemo s podnožja in na spodnji strani odpremo kovinski pokrov. Pod njim najdemo jumperje:

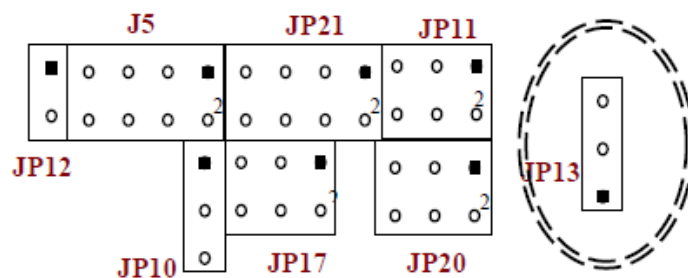

 
Za napajanje prikazovalnika na COM1 prestavimo JP11 na pin 1-3



 
Za napajanje prikazovalnika na COM2 prestavimo JP11 na pin 2-4



 Za napajanje prikazovalnika na COM3 prestavimo JP20 na pin 1-3




 Za napajanje prikazovalnika na COM3 prestavimo JP20 na pin 2-4




KS7315/7317:


KS terminal snamemo s podnožja in na spodnji strani odpremo kovinski pokrov. Pod njim najdemo jumperje:

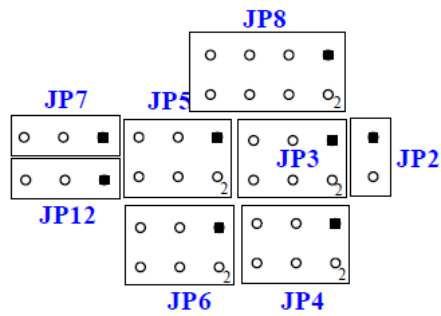

 
Za napajanje prikazovalnika na COM1 prestavimo jumper JP3 na pin 1-3



 
Za napajanje prikazovalnika na COM2 prestavimo jumper JP3 na pin 2-4



 Za napajanje prikazovalnika na COM3 prestavimo jumper JP5 na pin 1-3




 Za napajanje prikazovalnika na COM3 prestavimo jumper JP5 na pin 2-4




Jiva 5800PRO serije:


Jivo touch terminal snamemo s podnožja in na spodnji strani odpremo kovinski pokrov. Pod njim najdemo baterijo in jumperje:

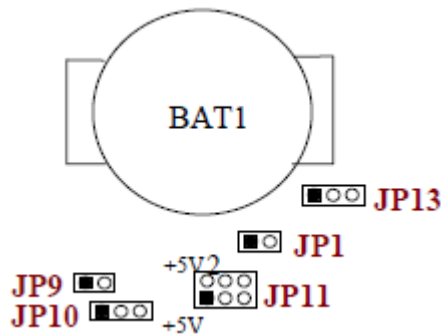

 Za napajanje prikazovalnika na COM1 prestavimo jumper JP11 na pin 1-3




 Za napajanje prikazovalnika na COM2 prestavimo jumper JP11 na pin 2-4



Jiva 8000PRO serije:

Jivo touch terminal snamemo s podnožja in na spodnji strani odpremo kovinski pokrov. Pod njim najdemo baterijo in jumperje:

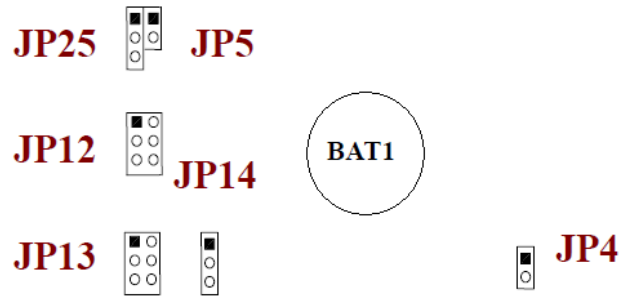

Za napajanje prikazovalnika na COM1 prestavimo jumper JP12 na pin 1-3

JP12



Za napajanje prikazovalnika na COM2 prestavimo jumper JP12 na pin 2-4

JP12



Za napajanje prikazovalnika na COM2 prestavimo jumper JP13 na pin 2-4

JP13



Za napajanje prikazovalnika na COM2 prestavimo jumper JP13 na pin 2-4

JP13

